


WALL CABINETS

1. Place cabinet SIDES in assembly jig with slotted edges up.
2. Slide the TOP into the female dovetails. (as shown) Be sure to keep the groove edges up, and the rabbet toward the inside of the cabinet.
3. Slide the cabinet BACK into the ploughs at the back of the SIDES. The back will fit into the rabbet on the TOP.

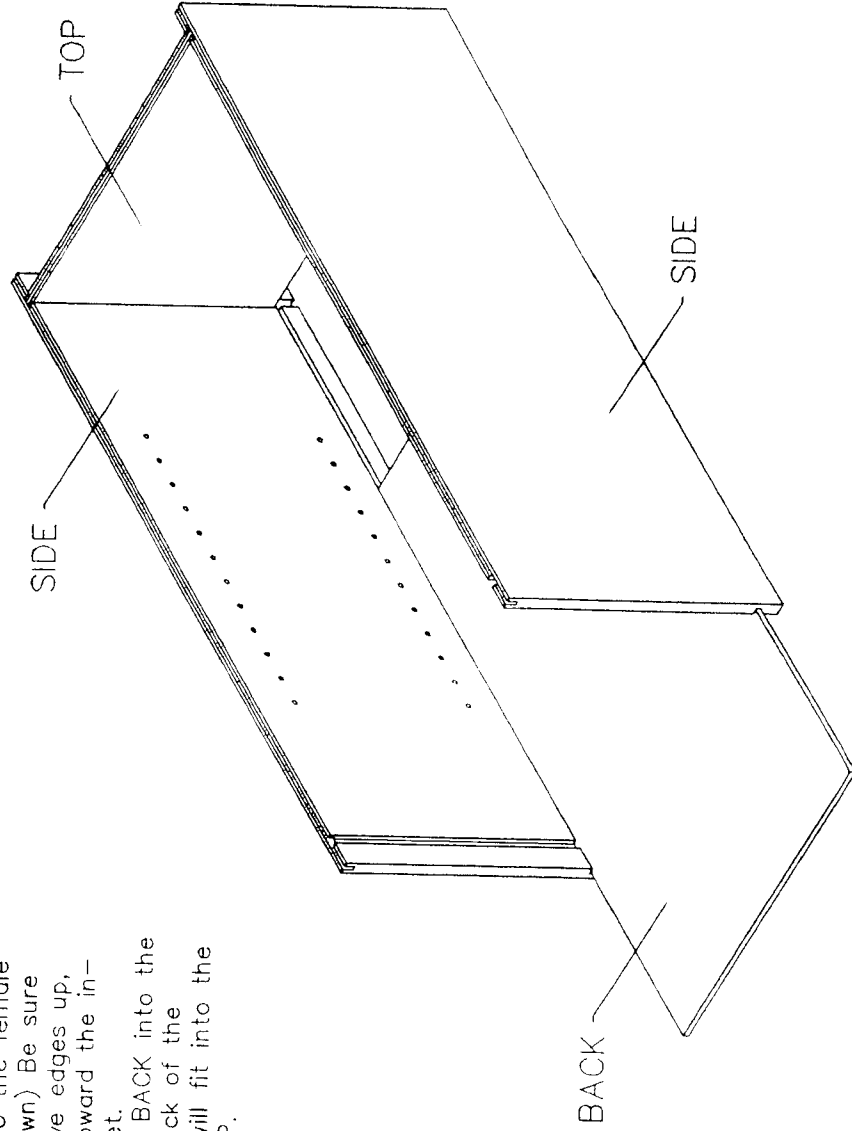

WALL CABINETS (cont.)

- Slide the **BOTTOM** into the cabinet **SIDE** dovetail. (as shown) Be sure to keep the grooved edge up, and the rabbet toward the inside of the cabinet. The cabinet **BACK** will fit into the rabbet on the **BOTTOM**.
- Prepare the **FRONT FRAME** per the instruction on page #2.
- After inserting splines into **FRONT FRAME**, spread glue into the slotted edges of the **SIDES**, **TOP** and **BOTTOM**, the **FRONT FRAME** can now be attached. Match the splines in the **FRONT** to the slots in the cabinet box. Tap the **FRONT** on with a rubber mallet. Make sure the cabinet front is pressed firmly onto the cabinet box.
- To attach **HANGER CLEATS** see page #3.

